

ERSATZTEILLISTE
PARTS LIST
LISTA DE RECAMBIOS
LISTE DE PIECE DE
RECHANGE



Art.Nr.:5056137105


Weidemann GmbH & Co. KG

Inhaltsverzeichnis Table of contents Table des matières Índice

ET Liste 1370 CX50 ET Liste 1370 CX50 ET Liste 1370 CX50 ET Liste 1370 CX50.....	1
1370 CX50 1370 CX50 1370 CX50 1370 CX50.....	8
Inhaltsverzeichnis Table of contents Table des matières Índice.....	8
Servicesatz Service kit Trousse de service Kit de servicio.....	10
Mittelgelenk Central link Lien central Enlace central.....	12
Vorder und Hinterwagen Car front and rear Avant et arrière de l'automobile Auto, delante. y trasera	14
Trittplatte Step board Marchepied Estribo.....	18
Fahrerschutzdach und Bügel Safety roof driver Circuit d'attaque du toit de sécurité Techo de seguridad conductor.....	22
Motorhaube Bonnet Bonnet Capó	24
Dämmatten Silencing foam set Jeu de mousse insonorisante Juego de espuma silenciadora.....	28

Ladeschwinge 915 Loading rocker 915 Culbuteur de chargement 915 Brazo de carga 915	30
Ladeschwinge 920 Loading rocker 920 Culbuteur de chargement 920 Brazo de carga 920	34
Motor Engine Moteur Motor	38
Auspuff und Luftfilter Exhaust and air filter Echappement et filtre à air Escape y filtro de aire	42
Gasbetätigung Gas operation Exploitation du carburant Operación de gas	44
Kraftstoffanlage Fuel system Système de carburant Sistema de combustible	46
Elektrische Anlage ohne Beleuchtung Electrical system without lighting Système électrique sans éclairage Sistema eléctrico sin iluminación	50
Elektrische Anlage mit Beleuchtung Electrical system with lighting Système électrique avec éclairage Sistema eléctrico con iluminación	54
Armaturentafel starr Rigid instrument panel Panneau d'instruments rigide Rigid instrument panel	58
Armaturentafel neigungsverstellbar Instrument panel adjustable Panneau d'instruments ajustable Panel de instrumentos regulable.....	62

Hydraulikschaltplan Hydraulic circuit diagram Diagramme de circuit hydraulique Diagrama de circuito hidráulico	66
Verstellpumpe Variable delivery pump Pompe à débit variable Bomba distribución variable.....	68
Fahrhydraulik Drive hydraulics Entraînement hydraulique Hidráulica de accionamiento	70
Lenkanlage Steering system Système de direction Hidráulica de dirección.....	74
Hydraulikanlage MV Hydraulic system MV Système hydraulique MV Sistema hidráulico MV	78
Hydraulikanlage HV Hydraulic system HV Système hydraulique HV Sistema hidráulico HV	82
Steuerventil Control valve Valve de contrôle Válvula de control	86
Bremsanlage Brake system Système de freinage Sistema de frenos	88
Vorderachse -ZF Bremse (4472004095) Front axle -ZF Brake (4472004095) Essieu avant -ZF Frein (4472004095) Eje frontal - ZF Freno (4472004095).....	92
Vorderachse -ZF Antrieb (4472004095) Front axle -ZF Drive (4472004095) Essieu avant -ZF Entraînement (4472004095) Eje frontal -ZF Transmisión (4472004095)	96

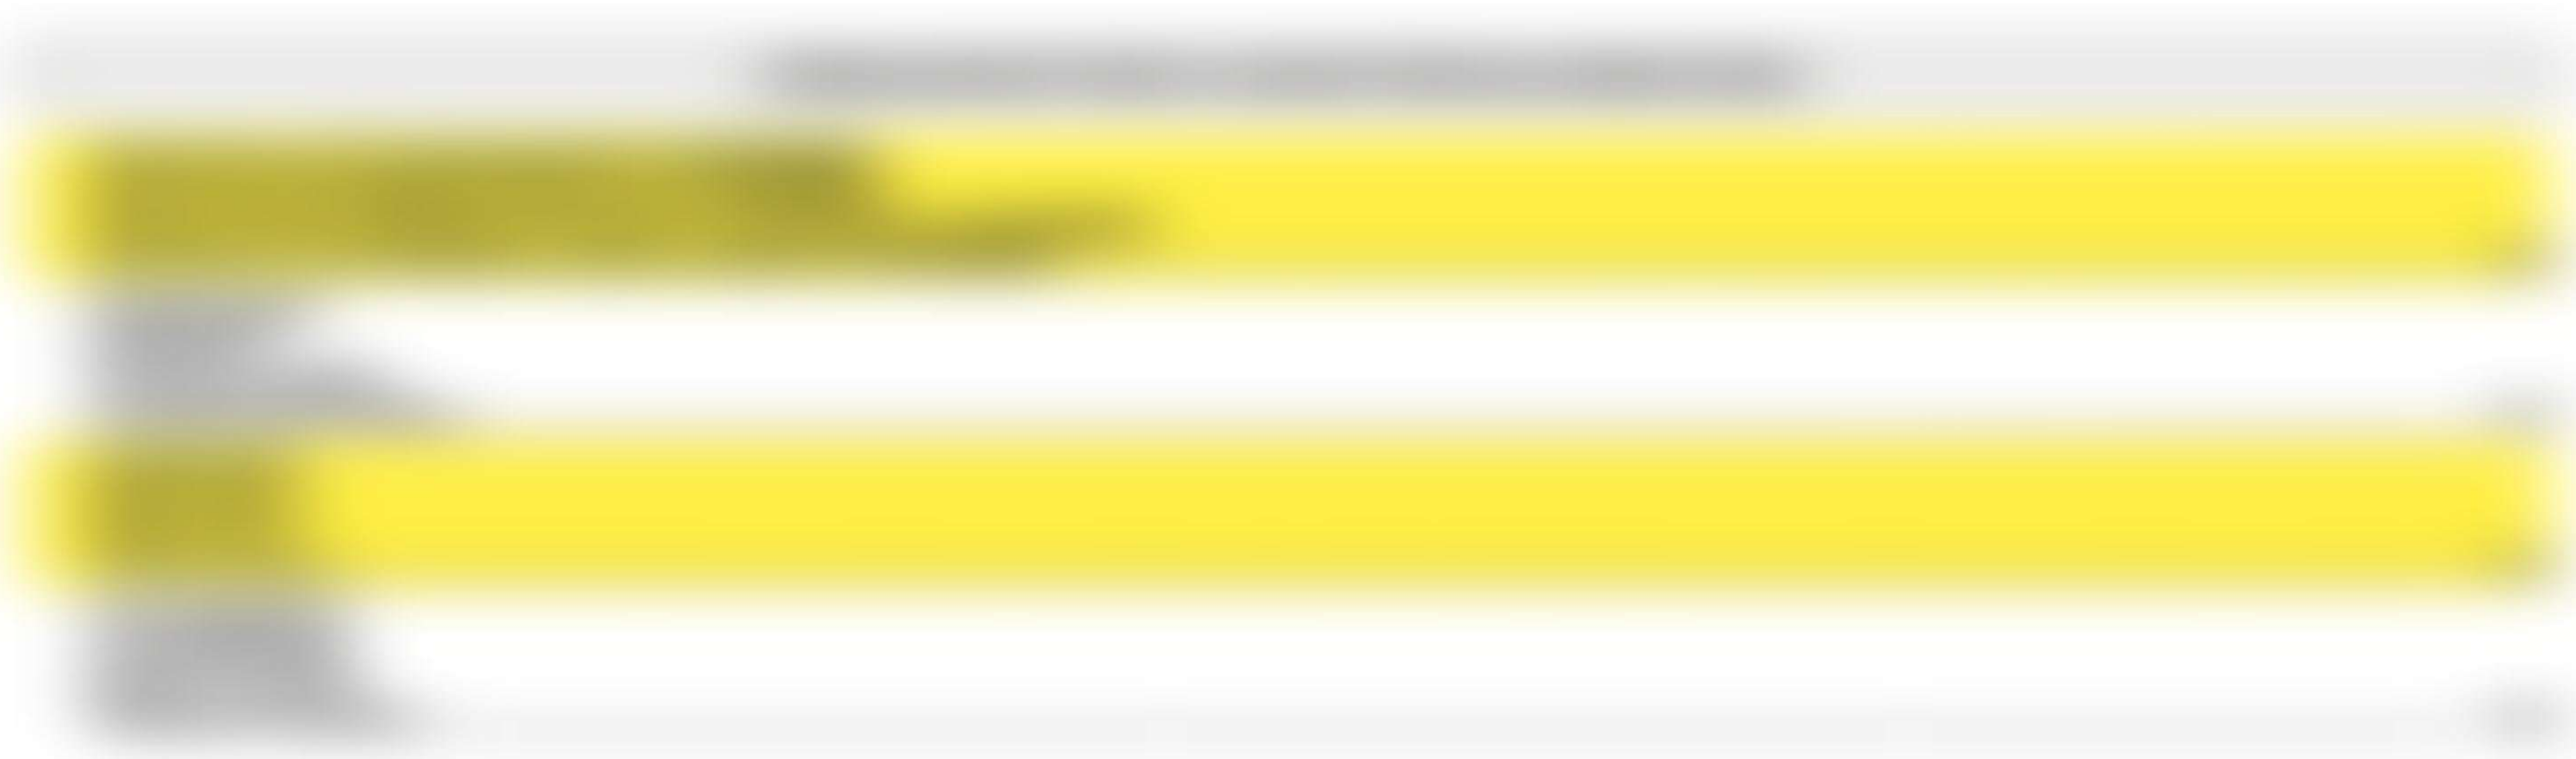















Item	Quantity	Unit	Material	Remarks
1	1	kg	Steel	
2	2	kg	Steel	
3	3	kg	Steel	
4	4	kg	Steel	
5	5	kg	Steel	
6	6	kg	Steel	
7	7	kg	Steel	
8	8	kg	Steel	
9	9	kg	Steel	
10	10	kg	Steel	
11	11	kg	Steel	
12	12	kg	Steel	
13	13	kg	Steel	
14	14	kg	Steel	
15	15	kg	Steel	
16	16	kg	Steel	
17	17	kg	Steel	
18	18	kg	Steel	
19	19	kg	Steel	
20	20	kg	Steel	
21	21	kg	Steel	
22	22	kg	Steel	
23	23	kg	Steel	
24	24	kg	Steel	
25	25	kg	Steel	
26	26	kg	Steel	
27	27	kg	Steel	
28	28	kg	Steel	
29	29	kg	Steel	
30	30	kg	Steel	
31	31	kg	Steel	
32	32	kg	Steel	
33	33	kg	Steel	
34	34	kg	Steel	
35	35	kg	Steel	
36	36	kg	Steel	
37	37	kg	Steel	
38	38	kg	Steel	
39	39	kg	Steel	
40	40	kg	Steel	
41	41	kg	Steel	
42	42	kg	Steel	
43	43	kg	Steel	
44	44	kg	Steel	
45	45	kg	Steel	
46	46	kg	Steel	
47	47	kg	Steel	
48	48	kg	Steel	
49	49	kg	Steel	
50	50	kg	Steel	
51	51	kg	Steel	
52	52	kg	Steel	
53	53	kg	Steel	
54	54	kg	Steel	
55	55	kg	Steel	
56	56	kg	Steel	
57	57	kg	Steel	
58	58	kg	Steel	
59	59	kg	Steel	
60	60	kg	Steel	
61	61	kg	Steel	
62	62	kg	Steel	
63	63	kg	Steel	
64	64	kg	Steel	
65	65	kg	Steel	
66	66	kg	Steel	
67	67	kg	Steel	
68	68	kg	Steel	
69	69	kg	Steel	
70	70	kg	Steel	
71	71	kg	Steel	
72	72	kg	Steel	
73	73	kg	Steel	
74	74	kg	Steel	
75	75	kg	Steel	
76	76	kg	Steel	
77	77	kg	Steel	
78	78	kg	Steel	
79	79	kg	Steel	
80	80	kg	Steel	
81	81	kg	Steel	
82	82	kg	Steel	
83	83	kg	Steel	
84	84	kg	Steel	
85	85	kg	Steel	
86	86	kg	Steel	
87	87	kg	Steel	
88	88	kg	Steel	
89	89	kg	Steel	
90	90	kg	Steel	
91	91	kg	Steel	
92	92	kg	Steel	
93	93	kg	Steel	
94	94	kg	Steel	
95	95	kg	Steel	
96	96	kg	Steel	
97	97	kg	Steel	
98	98	kg	Steel	
99	99	kg	Steel	
100	100	kg	Steel	

















Tractor Model Specifications

Model	Year	Engine Type	Power (HP)	Weight (kg)	Dimensions (mm)
Model A	2018	Diesel	100	1500	2000x1500x1800
Model B	2019	Diesel	120	1800	2200x1600x1900
Model C	2020	Diesel	150	2200	2500x1700x2000
Model D	2021	Diesel	180	2800	2800x1800x2100
Model E	2022	Diesel	220	3500	3200x1900x2200



Tractor Maintenance Schedule

Item	Frequency	Notes
Oil Change	Every 100 hours	Check oil level before starting
Filter Change	Every 200 hours	Replace air, fuel, and oil filters
Lubrication	Every 50 hours	Lubricate all greasable points
Fluid Levels	Check before each use	Check coolant, hydraulic oil, and brake fluid
Belts	Inspect every 100 hours	Check for wear and tension
Brakes	Inspect every 200 hours	Check brake pads and shoes
Wheels	Inspect every 100 hours	Check tire pressure and tread
Lighting	Check before each use	Ensure all lights are working
Safety	Check before each use	Verify safety features are operational




























[Blurred header text]

[Blurred main body text]

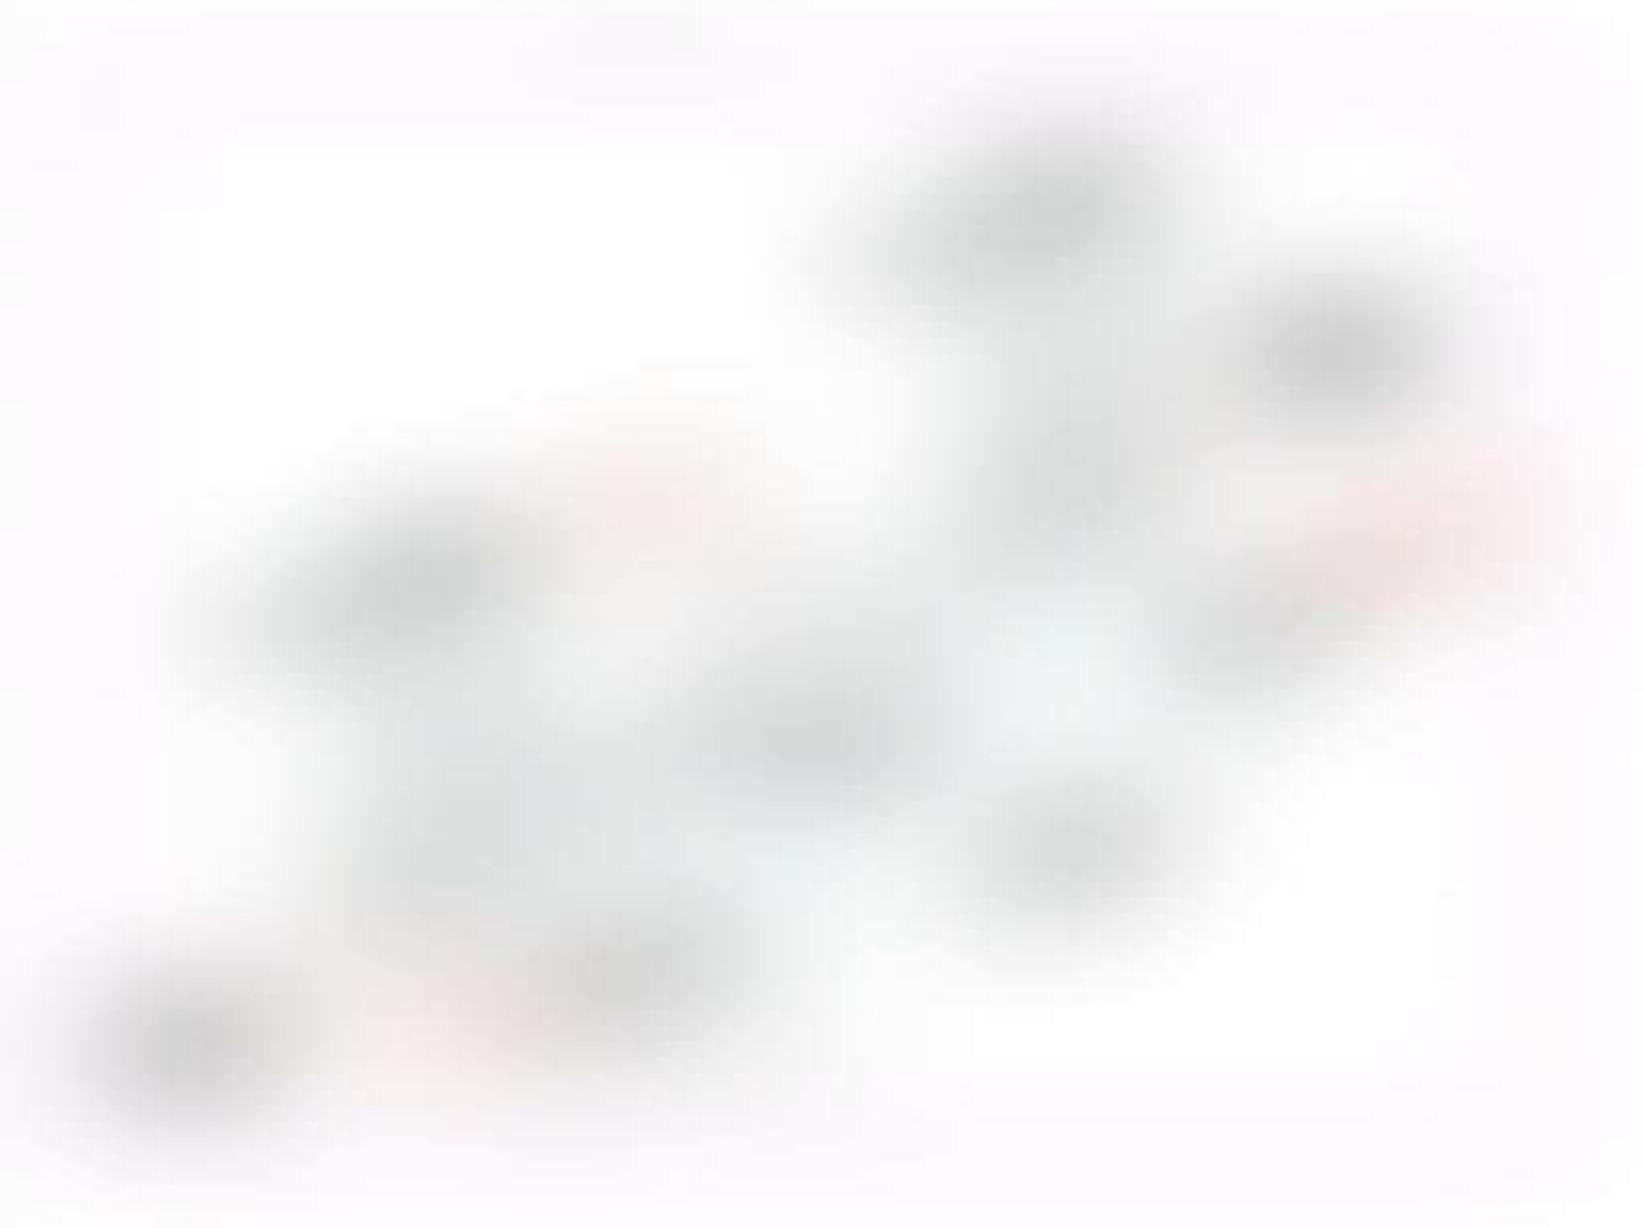





TRACTOR MAINTENANCE SCHEDULE

Item	Frequency	Notes
Oil Change	Every 100 hours	Check oil level before starting
Filter Change	Every 200 hours	Replace air and fuel filters
Lubrication	Every 50 hours	Lubricate all moving parts
Fluid Levels	Check before each use	Check coolant, brake, and hydraulic fluid
Belts and Hoses	Inspect every 100 hours	Look for wear and cracks
Brake Pads	Inspect every 200 hours	Replace if worn
Hydraulic System	Check every 100 hours	Check for leaks and proper pressure
Engine Components	Inspect every 200 hours	Check valves and timing
Transmission	Check every 200 hours	Check oil level and condition
Drive Shafts	Inspect every 100 hours	Check for damage and wear
Wheels and Tires	Check every 50 hours	Check tire pressure and tread
Lighting	Check every 100 hours	Ensure all lights are working
Electrical System	Check every 100 hours	Check battery and wiring
Safety Features	Check every 100 hours	Ensure all safety features are functional





Tractor Manual







Tractor Maintenance Schedule

1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---



INDEX


Introduction	1
Chapter 1: General Information	5
Chapter 2: Operation	15
Chapter 3: Maintenance	35
Chapter 4: Troubleshooting	55
Chapter 5: Specifications	75
Chapter 6: Diagrams	95
Chapter 7: Parts Lists	115
Chapter 8: Safety	135
Chapter 9: Environmental Protection	155
Chapter 10: Appendix	175



Model	Year	Engine	Transmission	Drive	Weight
Model A	1946-1955	4-cylinder	4-speed	2WD	1200 lbs
Model B	1956-1965	4-cylinder	4-speed	2WD	1400 lbs
Model C	1966-1975	4-cylinder	4-speed	2WD	1600 lbs
Model D	1976-1985	4-cylinder	4-speed	2WD	1800 lbs
Model E	1986-1995	4-cylinder	4-speed	2WD	2000 lbs
Model F	1996-2005	4-cylinder	4-speed	2WD	2200 lbs
Model G	2006-2015	4-cylinder	4-speed	2WD	2400 lbs
Model H	2016-2025	4-cylinder	4-speed	2WD	2600 lbs

Tractor Manual

1	Introduction
2	Specifications
3	Operation
4	Maintenance
5	Troubleshooting
6	Parts List
7	Diagram
8	Index

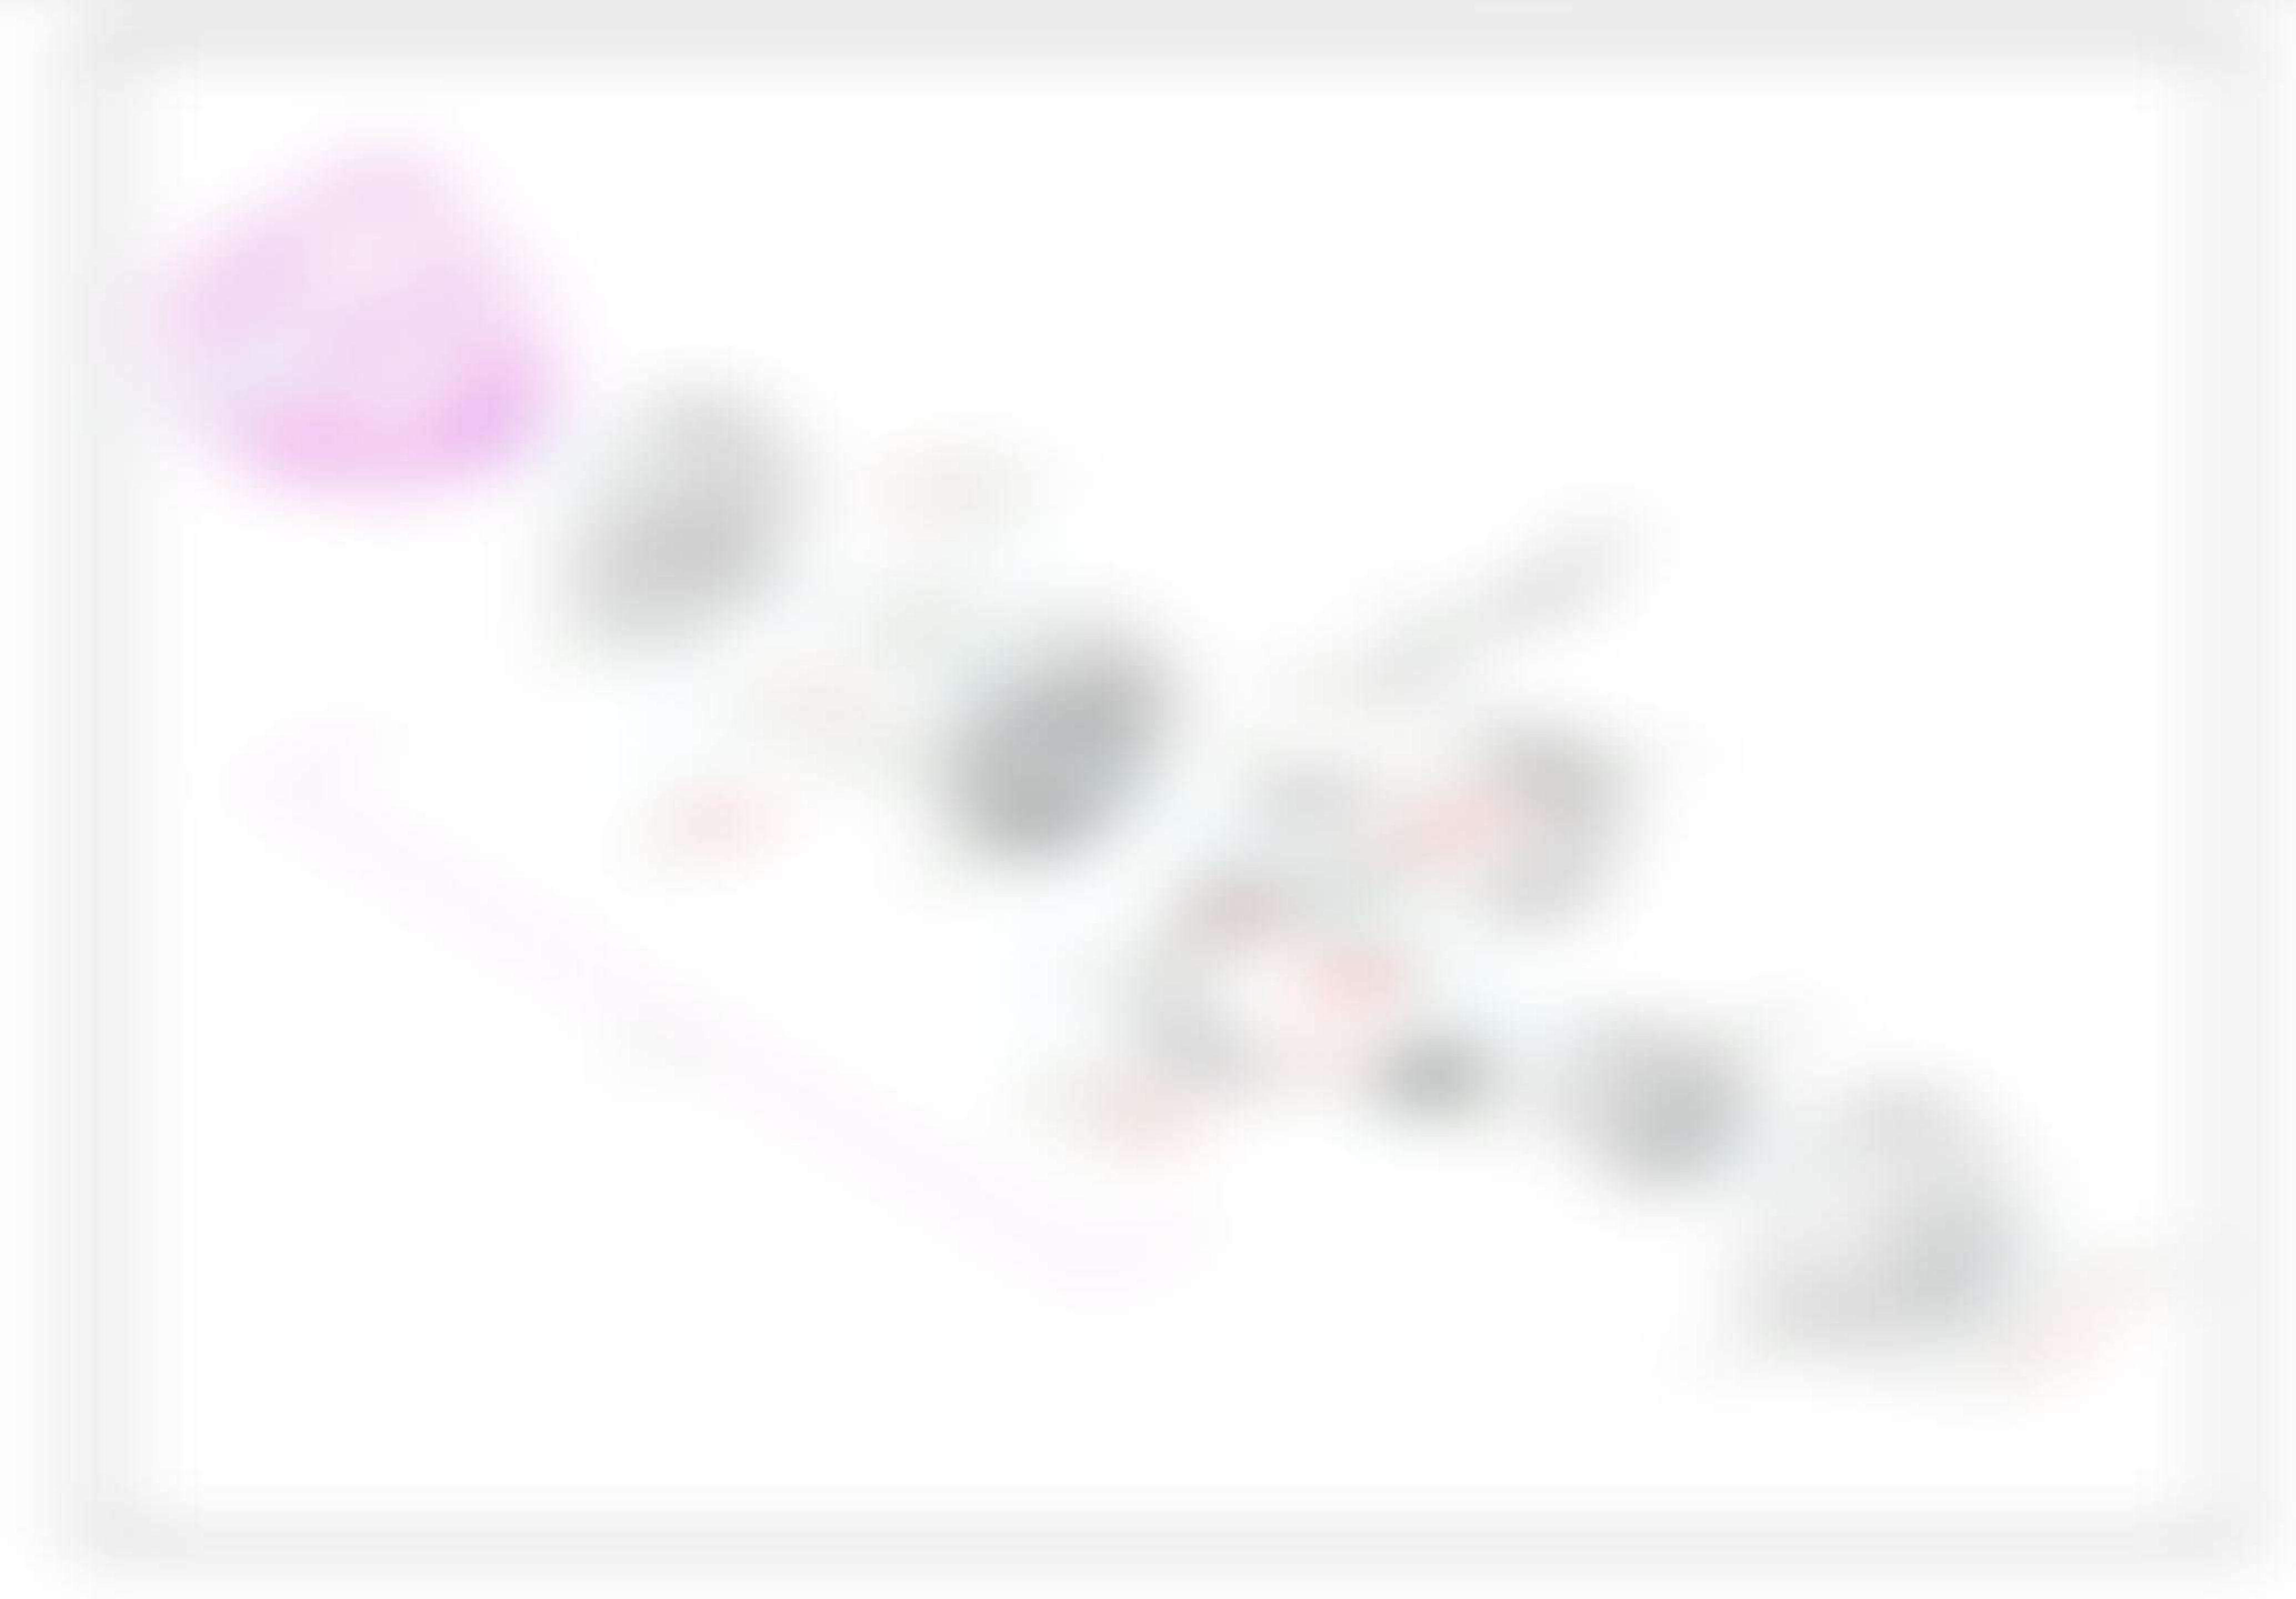































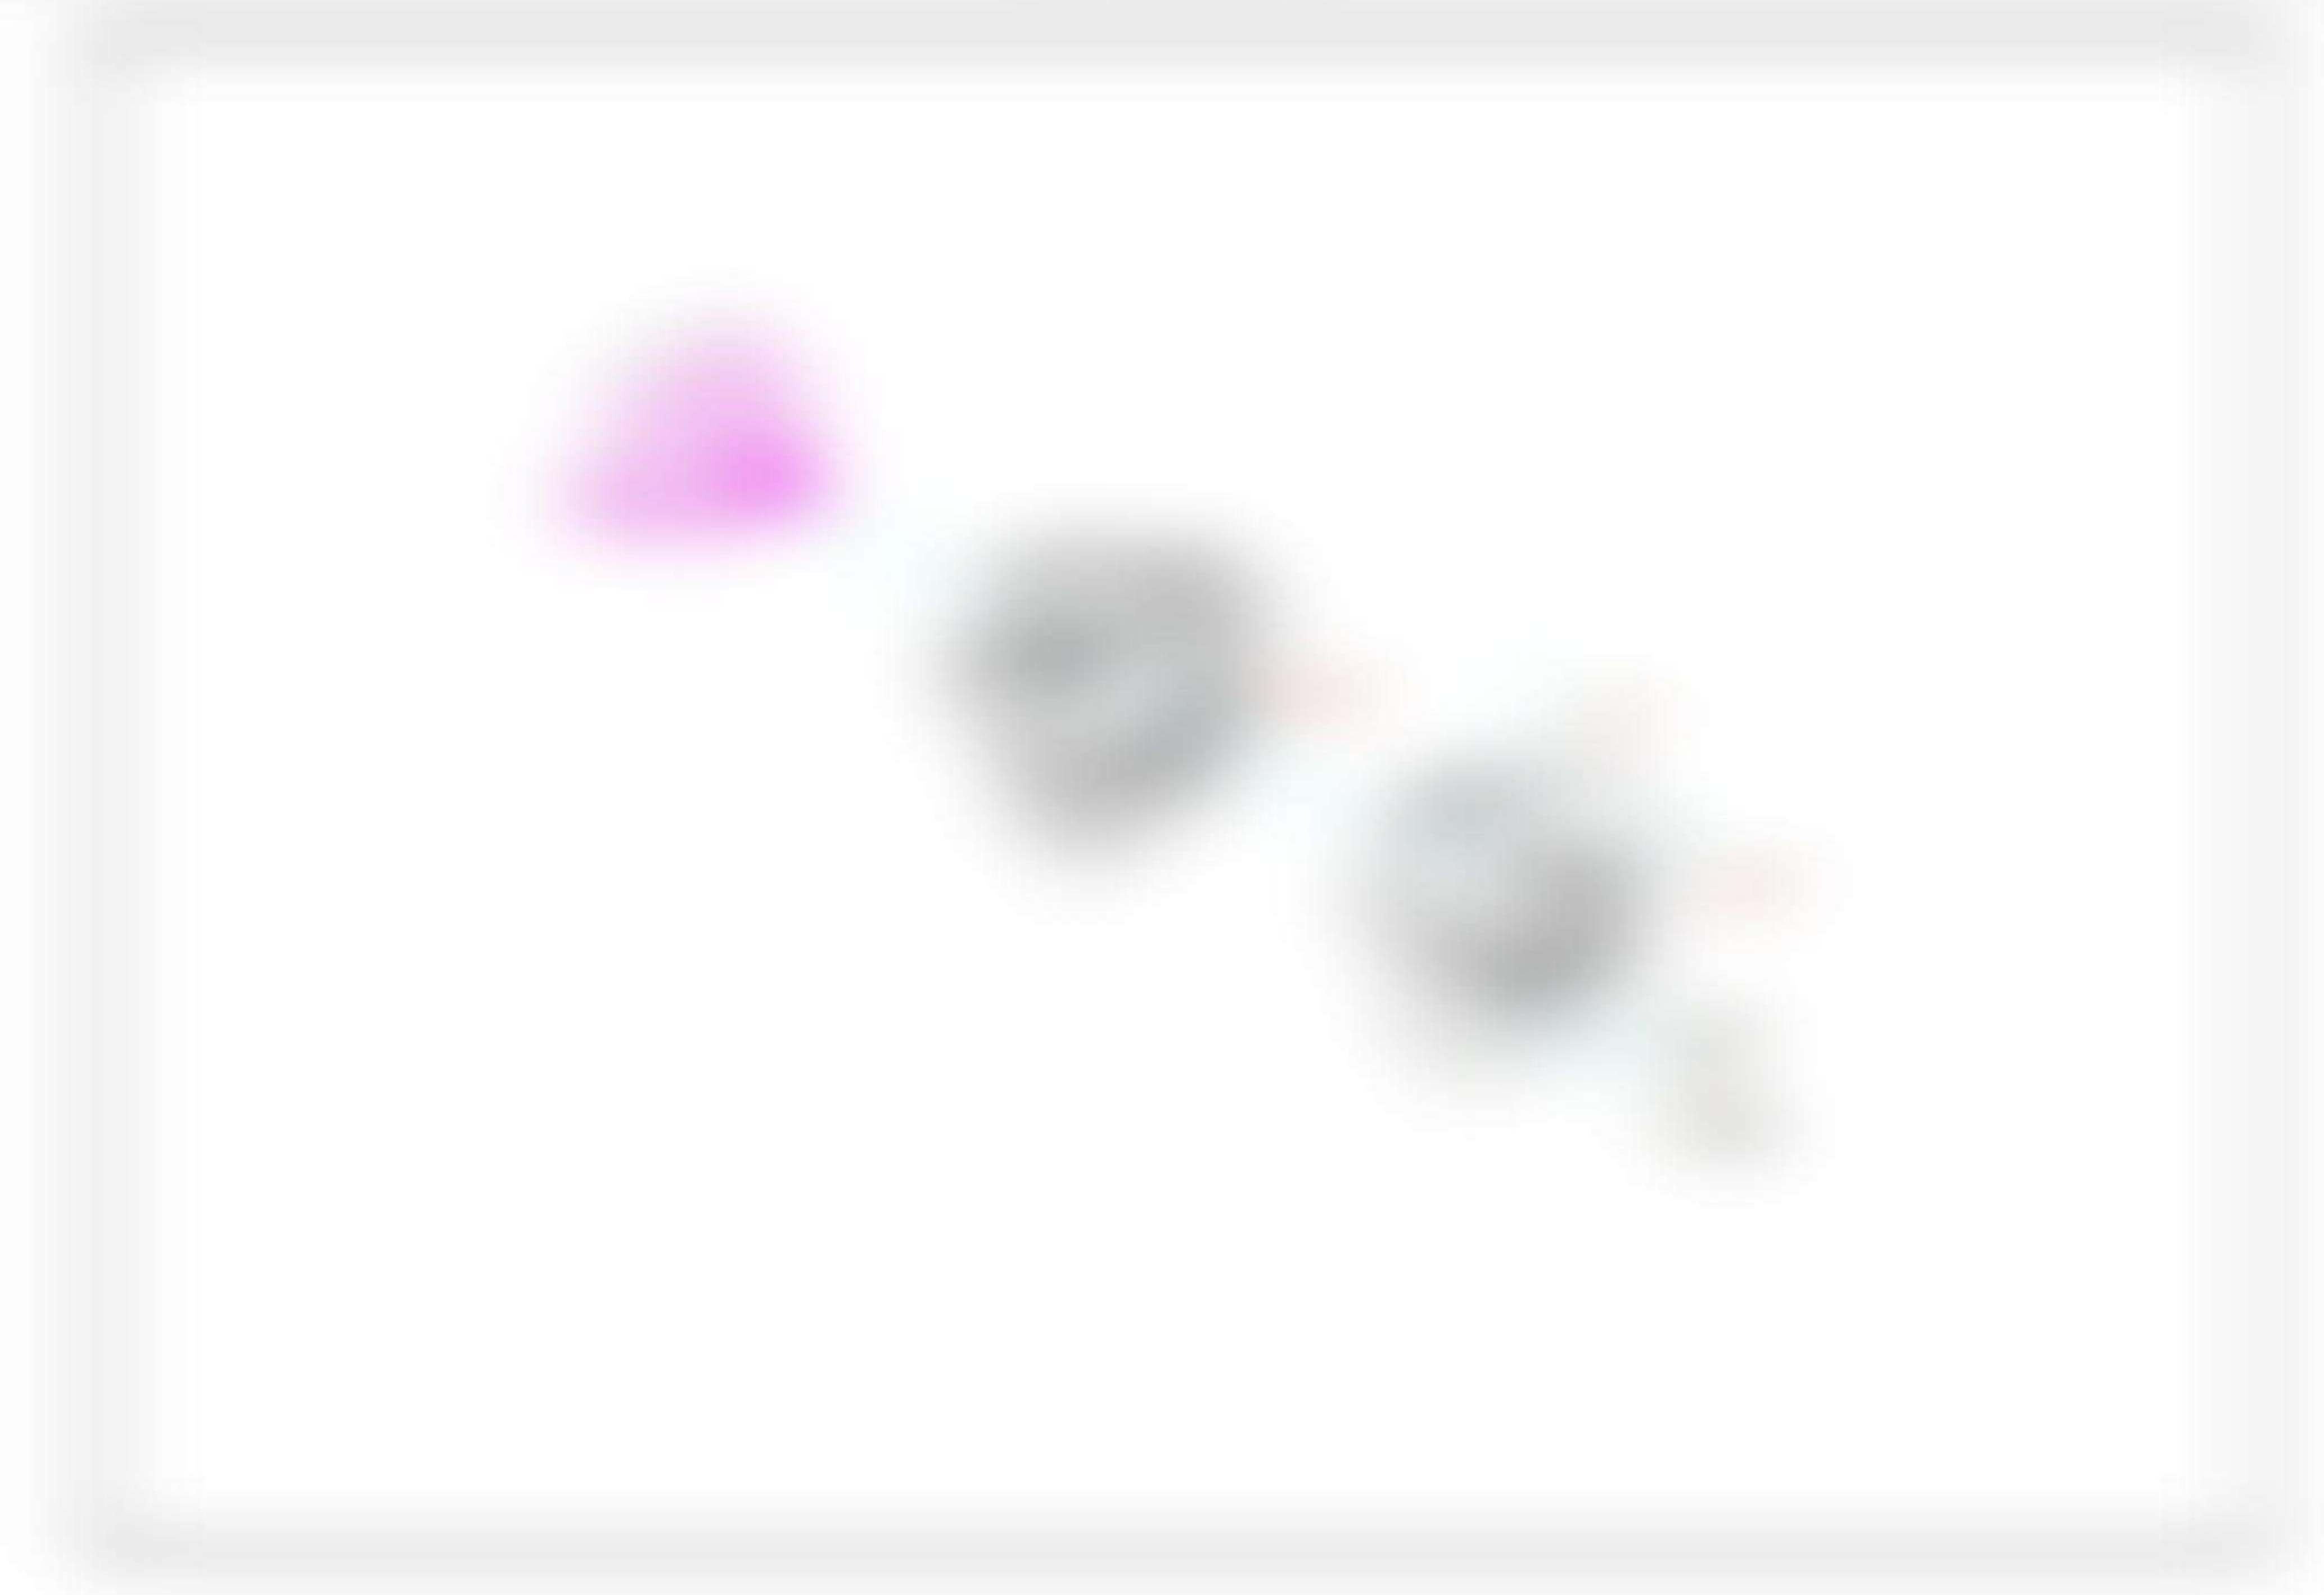



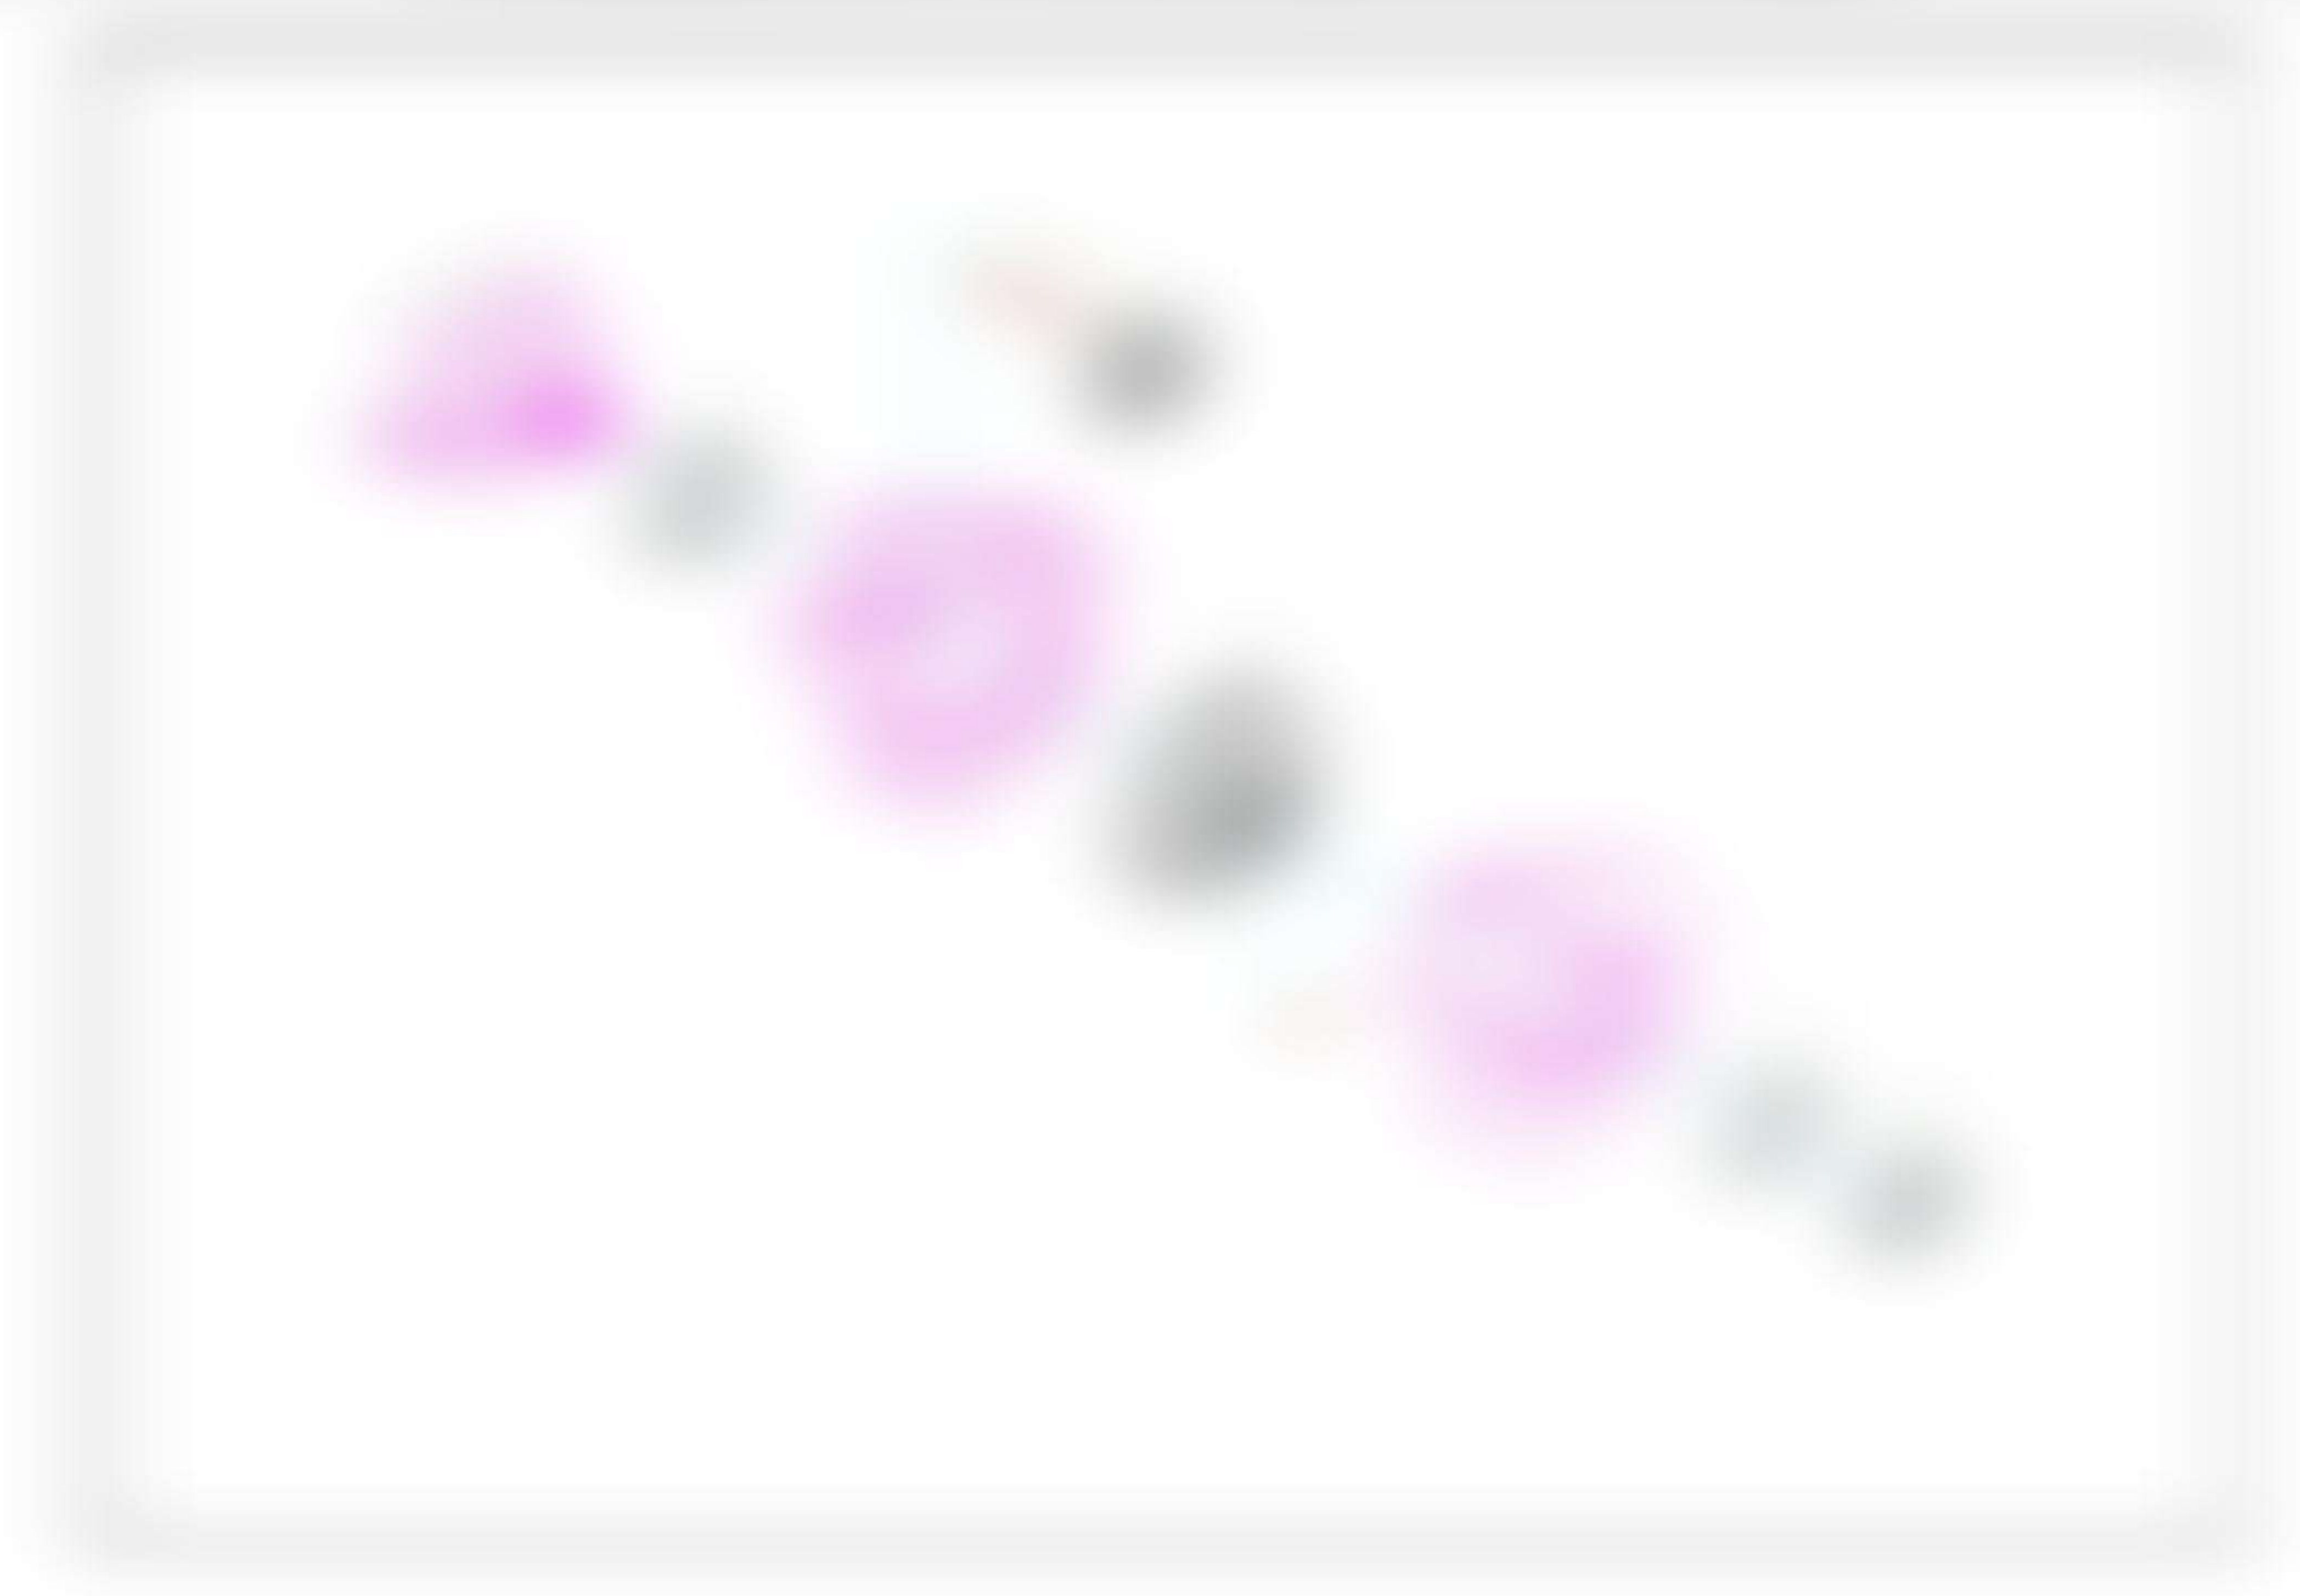



TRACTOR









Section	Page	Section	Page
Introduction	1	Specifications	15
Operation	2	Maintenance	25
Adjustments	3	Troubleshooting	35
Attachments	4	Warranty	45
Parts List	5	Index	55
Diagram 1	6		
Diagram 2	7		
Diagram 3	8		
Diagram 4	9		
Diagram 5	10		
Diagram 6	11		
Diagram 7	12		
Diagram 8	13		
Diagram 9	14		
Diagram 10	15		
Diagram 11	16		
Diagram 12	17		
Diagram 13	18		
Diagram 14	19		
Diagram 15	20		
Diagram 16	21		
Diagram 17	22		
Diagram 18	23		
Diagram 19	24		
Diagram 20	25		
Diagram 21	26		
Diagram 22	27		
Diagram 23	28		
Diagram 24	29		
Diagram 25	30		
Diagram 26	31		
Diagram 27	32		
Diagram 28	33		
Diagram 29	34		
Diagram 30	35		
Diagram 31	36		
Diagram 32	37		
Diagram 33	38		
Diagram 34	39		
Diagram 35	40		
Diagram 36	41		
Diagram 37	42		
Diagram 38	43		
Diagram 39	44		
Diagram 40	45		
Diagram 41	46		
Diagram 42	47		
Diagram 43	48		
Diagram 44	49		
Diagram 45	50		
Diagram 46	51		
Diagram 47	52		
Diagram 48	53		
Diagram 49	54		
Diagram 50	55		

